


## INSTALLATION (CONTINUED)


### 3 TIGHTEN LEFT ARC SCREW

Pull the Retention Strap all the way through until it stops at the sewn edge as shown. Attach and/or tighten the Left ARC screw.

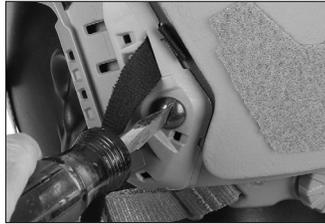

### 4 THREAD RETENTION STRAP

Align the angled end of the Retention Strap with the strap slots on the RIGHT ARC Rail as shown. Make sure the angle is parallel to that of the ARC and that the strap is not twisted and thread the Retention Strap through the strap slot as shown.

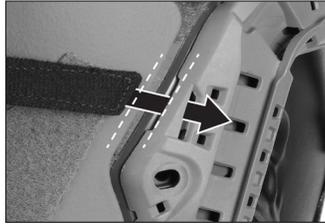

### 5 TIGHTEN RIGHT ARC SCREW

Pull the Retention Strap all the way through the strap slot and attach and/or tighten the Right ARC screw.



### 6 FASTEN THE RETENTION STRAP

Pull the Retention Strap tight across the back of the Rear Ballistic Appliqué and fasten the strap onto itself as shown.



## CLEANING AND CARE

1. Spot-clean the Low Profile Ballistic Appliqué with mild detergent and water to remove dirt or stains.
2. Clean the fasteners with a brush to remove loose dirt or debris.
3. Visually check the Low Profile Ballistic Appliqué for signs of damage – cracks, holes, soft areas. Replace if appliqué is damaged.
4. Check to ensure that the fasteners are securely attached to the appliqué and that they hold the helmet securely.

[www.ops-core.com](http://www.ops-core.com)

  
**ops-core®**

**FAST**

**LOW PROFILE**  
**BALLISTIC APPLIQUÉ**  
OPERATOR'S MANUAL



For FAST Carbon Helmets Equipped with  
Super High Cut (SHC) ARCs and SHC ARC Shims

This product is covered by one or more patents.  
For more information visit [www.gentexcorp.com/patents](http://www.gentexcorp.com/patents)

UM-1045 REV. B


Copyright © 2019 Gentex Corporation. Ops-Core and the Ops-Core logo are registered trademarks of Gentex Corporation or its affiliates.  
VELCRO® is a registered trademark of Velcro BVBA

# INTRODUCTION

## ABOUT YOUR LOW PROFILE BALLISTIC APPLIQUÉ

The FAST Low Profile Ballistic Appliqué (LPBA) is a lightweight accessory that offers increased ballistic protection for your FAST Carbon Helmet. The LPBA's two-piece construction is made up of a front section and rear section. These separate appliqué's can be quickly donned using the attachment clips and VELCRO®, enabling you to scale your protection level on demand.

## LOW PROFILE BALLISTIC APPLIQUÉ COMPONENTS:

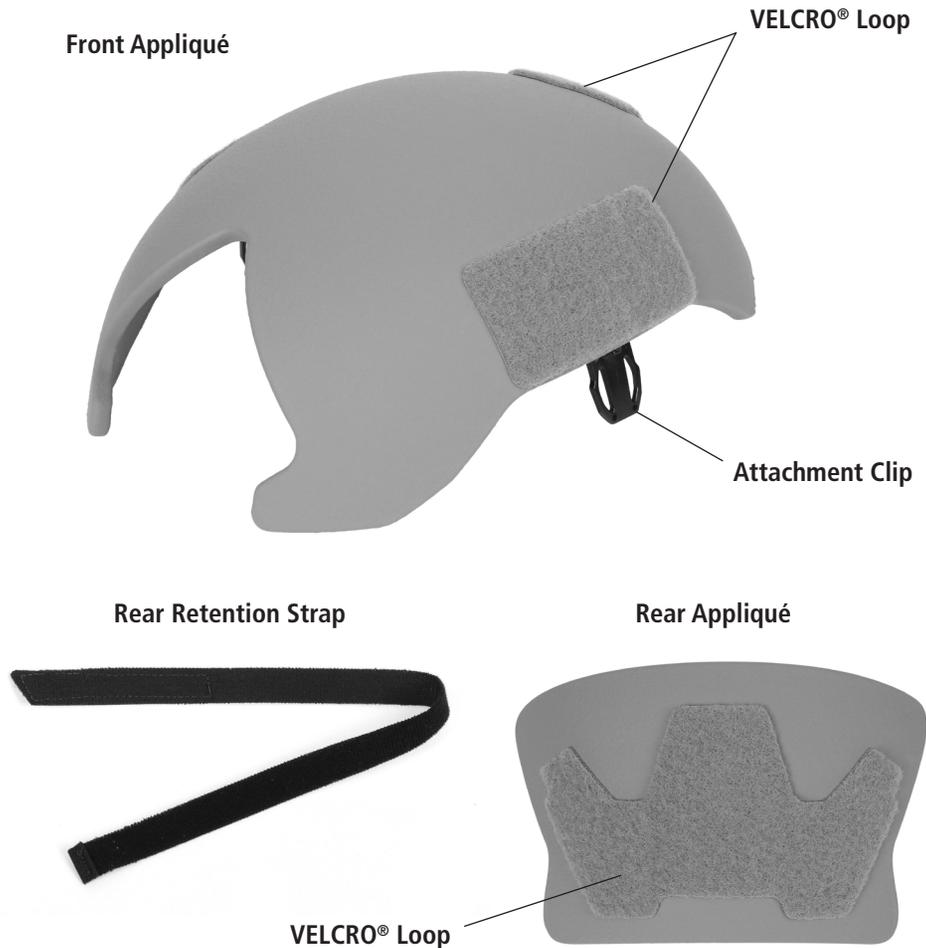

# INSTALLATION

## INSTALLING THE LOW PROFILE BALLISTIC APPLIQUÉ

Follow these steps to install the Low Profile Ballistic Appliqué to your helmet. Always be sure to check for a secure fit after installation.


### 1 INSTALL FRONT APPLIQUÉ

Simultaneously insert the attachment clip into the receiver located on the top edge of the SHC ARC Shim. Firmly apply pressure on the appliqué until the VELCRO engages.



### 2 INSTALL REAR APPLIQUÉ

Using the rear edge of the front appliqué as a guide, align the rear appliqué and firmly apply pressure on the appliqué until the VELCRO engages.

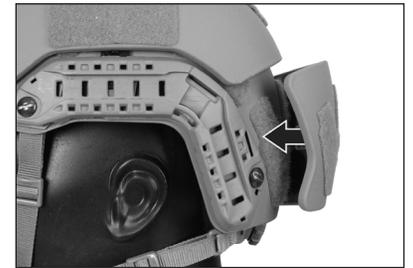

## INSTALLING THE REAR RETENTION STRAP

Follow these steps to install the Rear Retention Strap to your helmet. The Retention Strap will help secure the Rear Appliqué to the helmet.


### 1 LOOSEN REAR ARC SCREWS

Loosen/remove the rear screws of your helmet on both the left and right sides.



### 2 THREAD RETENTION STRAP

With the VELCRO hook facing towards the helmet, align the angled end of the Retention Strap with the strap slots on the LEFT ARC Rail as shown. Make sure the angle is parallel to that of the ARC. Insert the Retention Strap through the strap slot as shown.

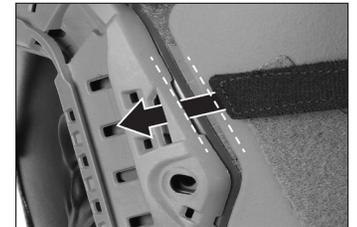

CONTINUED ON BACK ►